

Clackamas 18 FT. DOUBLE Driveway Gates and Posts



Installation Instructions

Step 1

Locate and install posts to appropriate height to match gate shoulder height.
Verify dimension between posts or masonry post hinge weld plates

Step 2

Locate gate, mark location to drill holes for hinge bolts.
After drilling bolt holes, hang gate and grease hinges

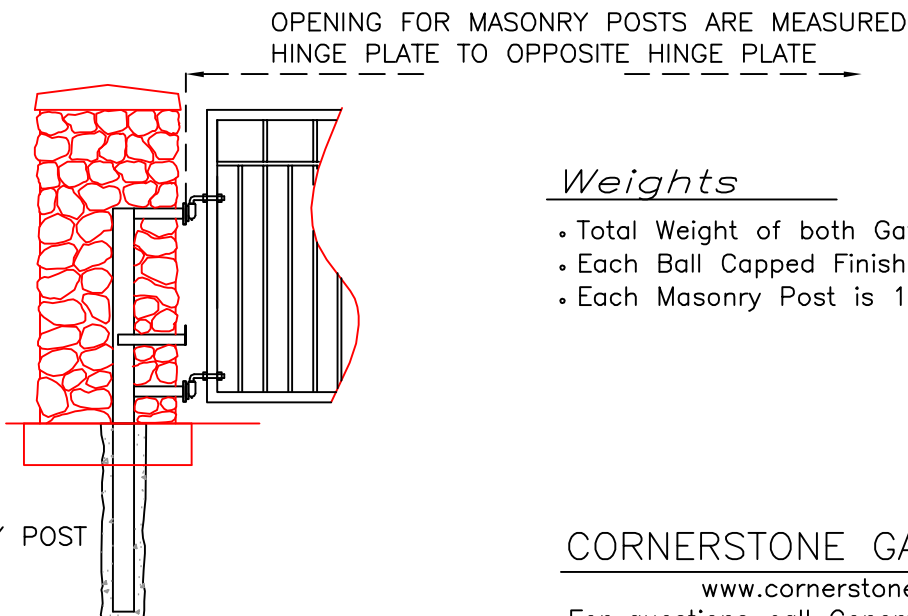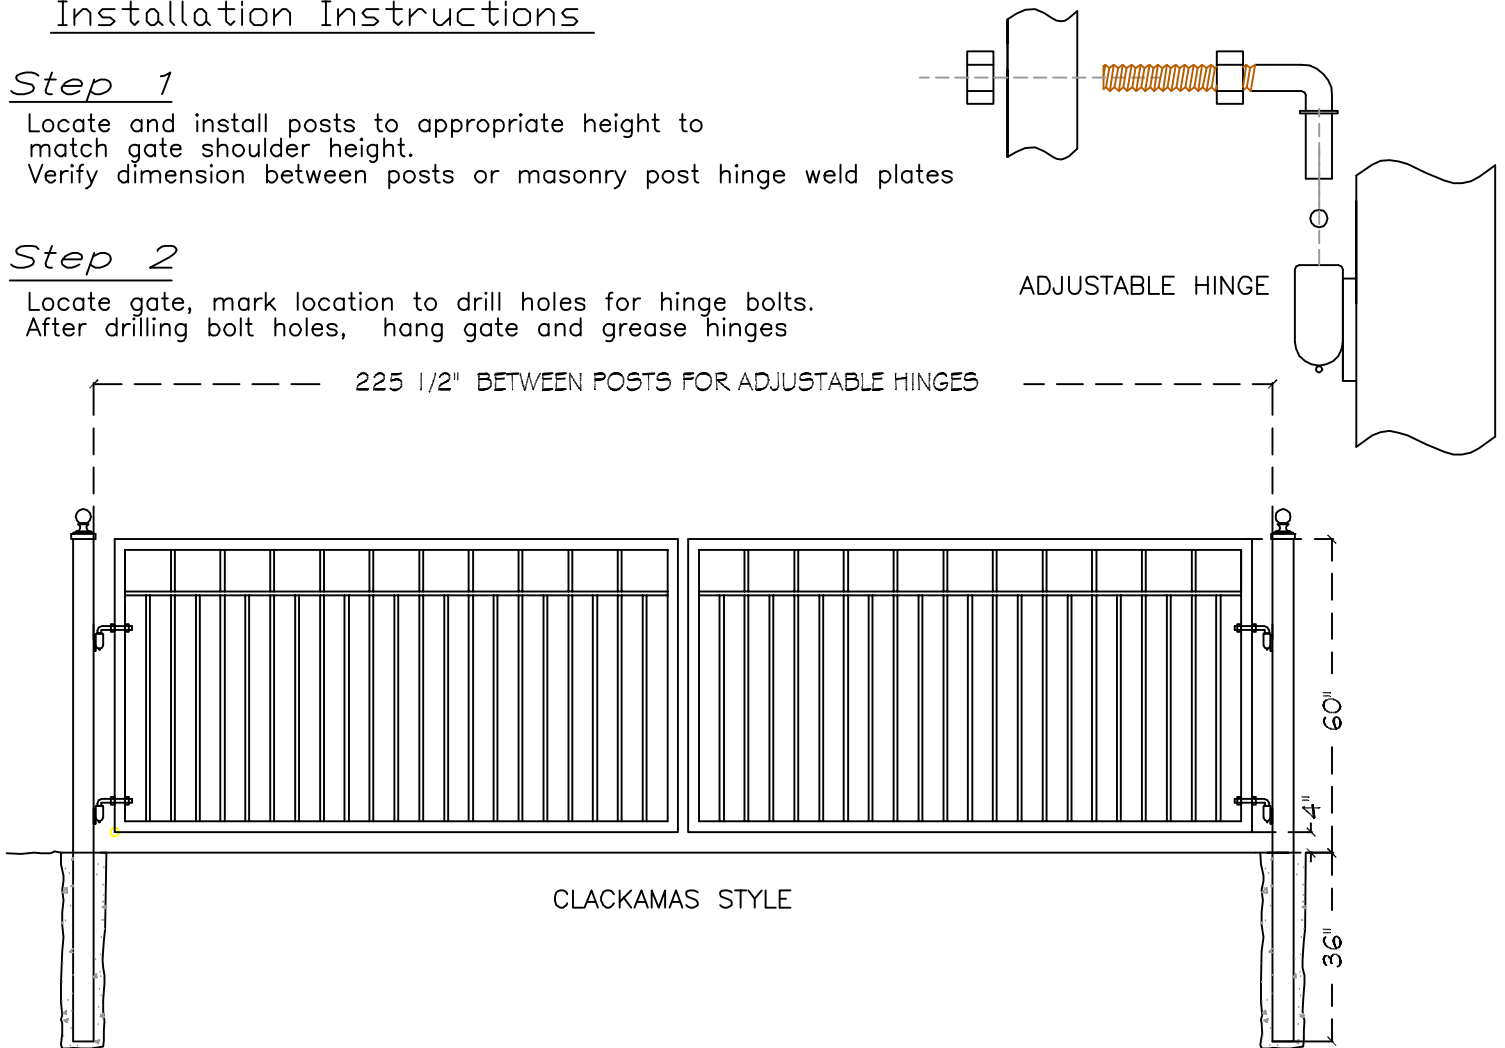

Weights

- Total Weight of both Gate Panels is 166 Lbs.
- Each Ball Capped Finished Post is 100 Lbs.
- Each Masonry Post is 109 Lbs.

CORNERSTONE GATES and FENCING

www.cornerstonefencing.com

For questions call Conerstone Fencing
at (877) 489-1999 between 7:00AM and 3:30PM PST
or write to Cornerstone Fencing
10100 SE Main St. - Milwaukie, OR. 97222