

# Walk Through Gates and Posts


## Installation Instructions

### *Step 1*

Locate and install posts to appropriate height to match gate shoulder height. See chart for dimensions between posts for type of hinges and latch to be used.

### *Step 2*

Verify direction gate is to swing.  
After concrete is cured, hold gate in position and attach hinges using self tapping screws.

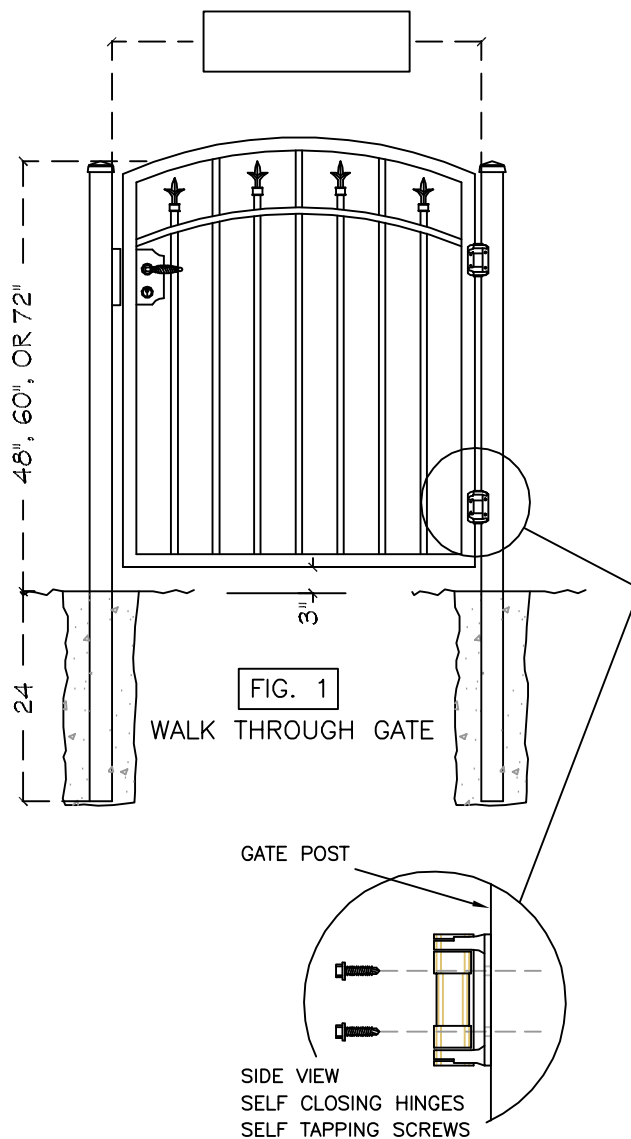

## Tools Required

- Pencil
- Tape measure
- Drill
- 3/16" drill bit
- Ratchet wrench with sockets
- Screw drivers

## CORNERSTONE GATES and FENCING

[www.cornerstonefencing.com](http://www.cornerstonefencing.com)

For questions call Cornerstone Fencing  
at (877) 489-1999 between 7:00AM and 3:30PM PST  
or write to CornerStone Fencing  
10100 SE Main St. - Milwaukie, OR. 97222